

# LOWER UNIT

## CONTENTS

|                                                        |             |
|--------------------------------------------------------|-------------|
| <b>REMOVAL &amp; DISASSEMBLY .....</b>                 | <b>8- 2</b> |
| <b>PINION BEARING .....</b>                            | <b>8- 6</b> |
| <b>INSPECTION .....</b>                                | <b>8- 8</b> |
| <b>PROPELLER .....</b>                                 | <b>8- 8</b> |
| <b>GEARCASE .....</b>                                  | <b>8- 8</b> |
| <b>GEARS .....</b>                                     | <b>8- 8</b> |
| <b>PROPELLER SHAFT COMPONENTS .....</b>                | <b>8- 9</b> |
| <b>PROPELLER SHAFT BEARING HOUSING .....</b>           | <b>8- 9</b> |
| <b>SHIFT ROD GUIDE HOUSING COMPONENTS .....</b>        | <b>8-10</b> |
| <b>WATER PUMP AND RELATED ITEMS .....</b>              | <b>8-10</b> |
| <b>WATER INLET HOUSING .....</b>                       | <b>8-10</b> |
| <b>DRIVESHAFT .....</b>                                | <b>8-11</b> |
| <b>ASSEMBLY &amp; INSTALLATION .....</b>               | <b>8-12</b> |
| <b>LOWER UNIT GEARS- SHIMMING AND ADJUSTMENT .....</b> | <b>8-21</b> |
| <b>FOREWARD GEAR/PINION GEAR .....</b>                 | <b>8-21</b> |
| <b>PINION GEAR/REVERSE GEAR .....</b>                  | <b>8-23</b> |
| <b>CHECKING PROPELLER SHAFT THRUST PLAY .....</b>      | <b>8-24</b> |